
























	Artikel		Pris	Inkl moms
	NM	Notställ Magic	556	695
	NSS	Notställ Standard Svart	556	695
	SB	Softbag	156	195
	LM	Magic lamp	220	275
	LS	Standard Lamp	292	365
	LB-LAMP	Battery powered LED lamp	260	325
	LV	Lamp hard case	620	775
	V8	Väska	612	765
	NK	Notklämma	38	48
	A	Ankare	36	45
	SKM	Skärm Magic	250	313
	S	Stativ S	375	469
	SKS	Notskärm Standard	235	294
	NP3	Music Stand	435	544
	NP2	Music Stand	425	531
	NP5	Music Stand	456	570
	S3	Stativ	320	400
	S2	Stativ	300	375
	SKN3	Skärm till NP3	140	175
	SKN5	Skärm till NP5	280	350
	NP3CB	Soft bag	165	206
	NP5CB	Soft bag	225	281


	Artikel		Pris	Inkl moms
	MS4	Microphone stand	132	165
	MS5	Microphone stand	156	195
	MIC7E	Microphone stand	260	325
	MIC6A	Micstativ	220	275
	MIC5B	Micstativ	180	225
	MIC5C	Micstativ	220	275
	MIC8E	Micstativ	316	395
	MICLS	Microphone stand	1500	1875
	BM2	Microphone boom	195	244
	MICD	Attachable Microphone boom	200	250
	NPD	Notskärm	220	275
	HGL	Drink holder	76	95
	MICCB	Soft bag	64	80
	MICCB5	Soft bag	316	395

	Artikel		Pris	Inkl moms
	KB2EX	Keyboard Stand	356	445
	KB6EX	Keyboard Stand	280	350
	KB20	Keyboard Stand	636	795
	KBD2	Extension to Keyboard stands.	180	225
	KBD1	Extension to Keyboard stands.	180	225
	KBD4	Music Desk for Keyboard Stand KB	325	406
	KBD5	Microphone Boom	225	281
	GIT4E	Guitar stand	132	165
	GIT4A	Guitar stand	132	165

	Artikel		Pris	Inkl moms
	BOX5	Speaker Stand	280	350
	BOX4	Speaker Stand	380	475
	W2	Högtalarstativ	280	350
	GBOX1	Speaker attachment	76	95
	GBOX2	Adapter to 1 set of light	132	165
	SAT3	Satellite speakers	300	375
	BOXCB	Soft bag	140	175
	LSKIT	Tripod for light	476	595
	LS4	Light tripod	476	595
	TS120	Bom för 4 ljus (till LS4)	140	175
	TS1	Adapter för 1 st ljus för LS4 Ø ~	100	125
	RPG	Fäste för ljusramp R150	120	150
	R150	Lightbar truss construction	600	750
	R100	Lightbar truss construction	476	595
	R50	Lightbar truss construction	316	395
	RPD2	Base for lightbar	236	295
	RZK1	Corner part to lightbar	556	695
	RZT1	Lightbar, odd angles	636	795
	RZT2	Lightbar, T-cross	636	795
	DJ4T	Sound and light, DJ stands	1500	1875

Artikel			Pris	Inkl moms
	BN2	Piano Stool	400	500
	ST1	Trummstol	360	450
	ST2	Trummstol	360	450

Artikel		Pris	Inkl moms	
	ODM	Magic - Spare part	90	113
	UDM	Magic - Reservdel	90	113
	HM	Magic - Spare part	96	120
	LPM	Magic - Spare part	15	19
	HTM	Magic - Spare part	24	30
	LOCK	Magic - Spare part	20	25
	HS	Standard - Spare part	88	110
	BS	Stativ S1 - reservdel	36	45
	BOTTEN	Tripod S1 - Spare part	36	45
	TOPP	Stativ S1- Reservdel	68	85
	KONA	Tripod S1- Spare part	30	38
	KUGGKIL	Tripod S1- Spare part	20	25
	RING3	Tripod S1 - Spare part	20	25
	RING2	Tripod S1- Spare part	20	25
	RING1	Tripod S1 - Spare parts	20	25
	PLUPP1	Old (Brown) Tripod - Spare part	20	25
	PLUPP2	Old (Brown) Tripod - Spare part	20	25
	PLUPP3	Old (Brown) Tripod - Spare part	20	25
	SNU	Stativ S1 - Reservdel	68	85
	SNM	Stativ S1 - Reservdel	68	85
	SNN	Stativ S1 - Reservdel	68	85
	LK	Lamp clip	60	75
	LMB	Magic - Spare part	35	44

Artikel	Pris	Inkl moms
 LMA Magic - Spare part	20	25